

Boreal DIFFUSION 150

Notice d'installation



MODEL Boreal DIFFUSION 150

1500x1000x2000 mm

 
Tension:AC220-240V



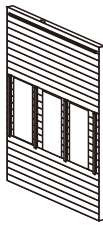
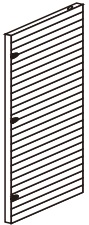
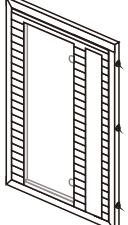
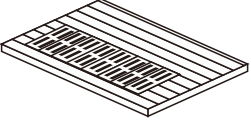
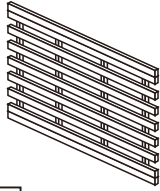
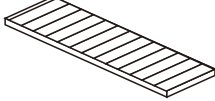
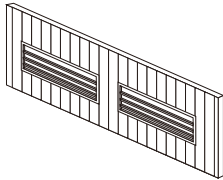
 










Puissance:2900W

 
 
Courant:13.1A

Fréquence nominale:50/60HZ

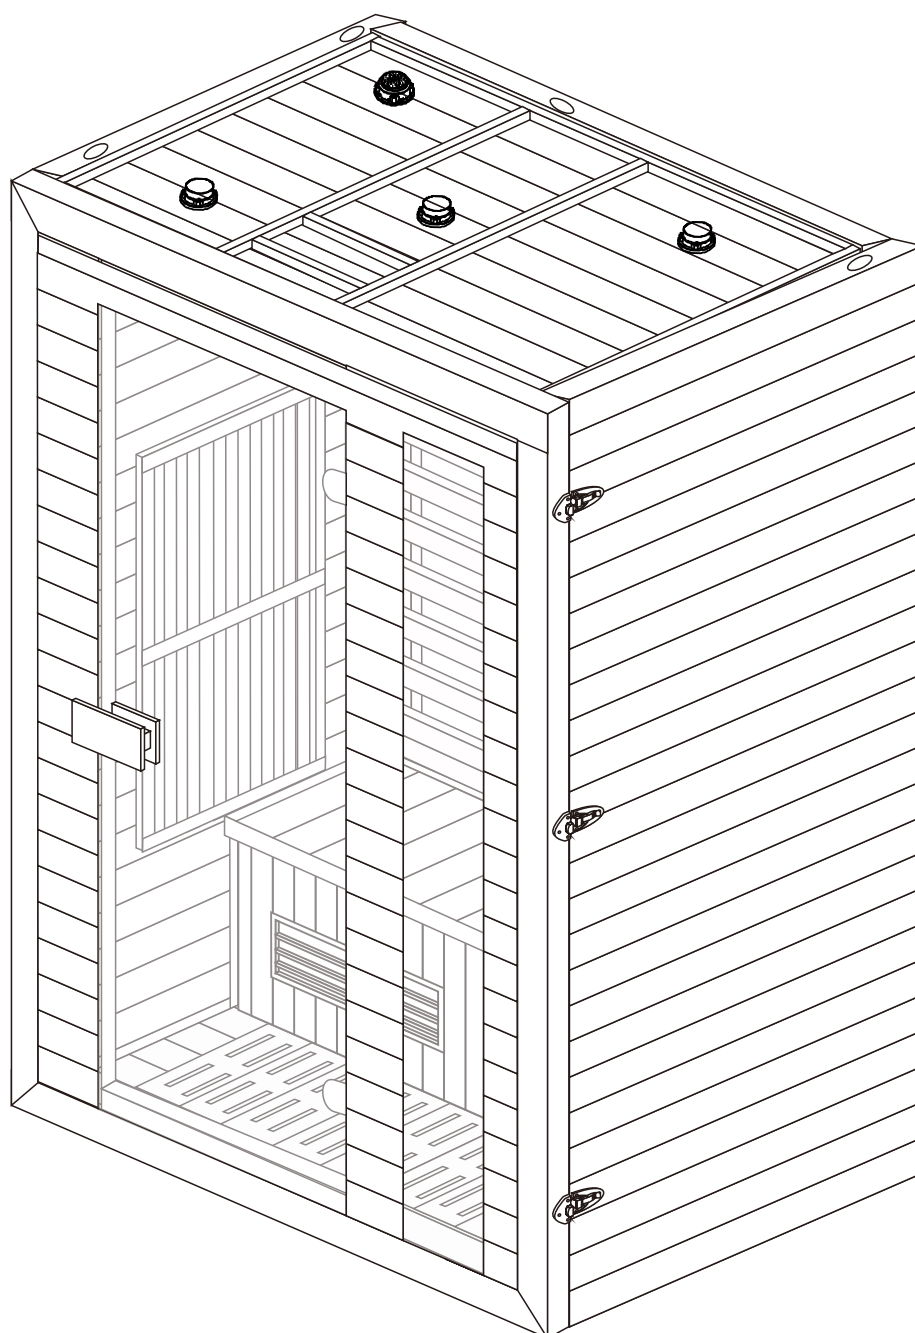Résistance:>20M Ω

 
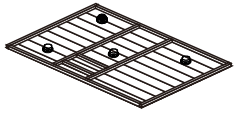 


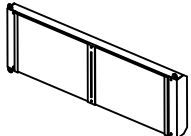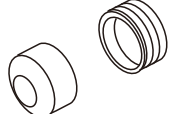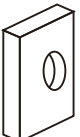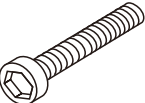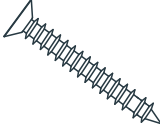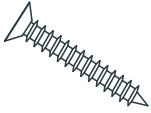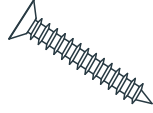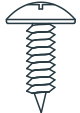				
01	X102	X103	X104	X105
				
06	X107	X108	X109	X110
				
11	X1012	X513	X214	X8
				
16	X217	X818	X219	X15

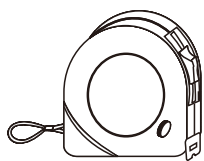 
 


4mm
2.5mm

 
 
Etape 1

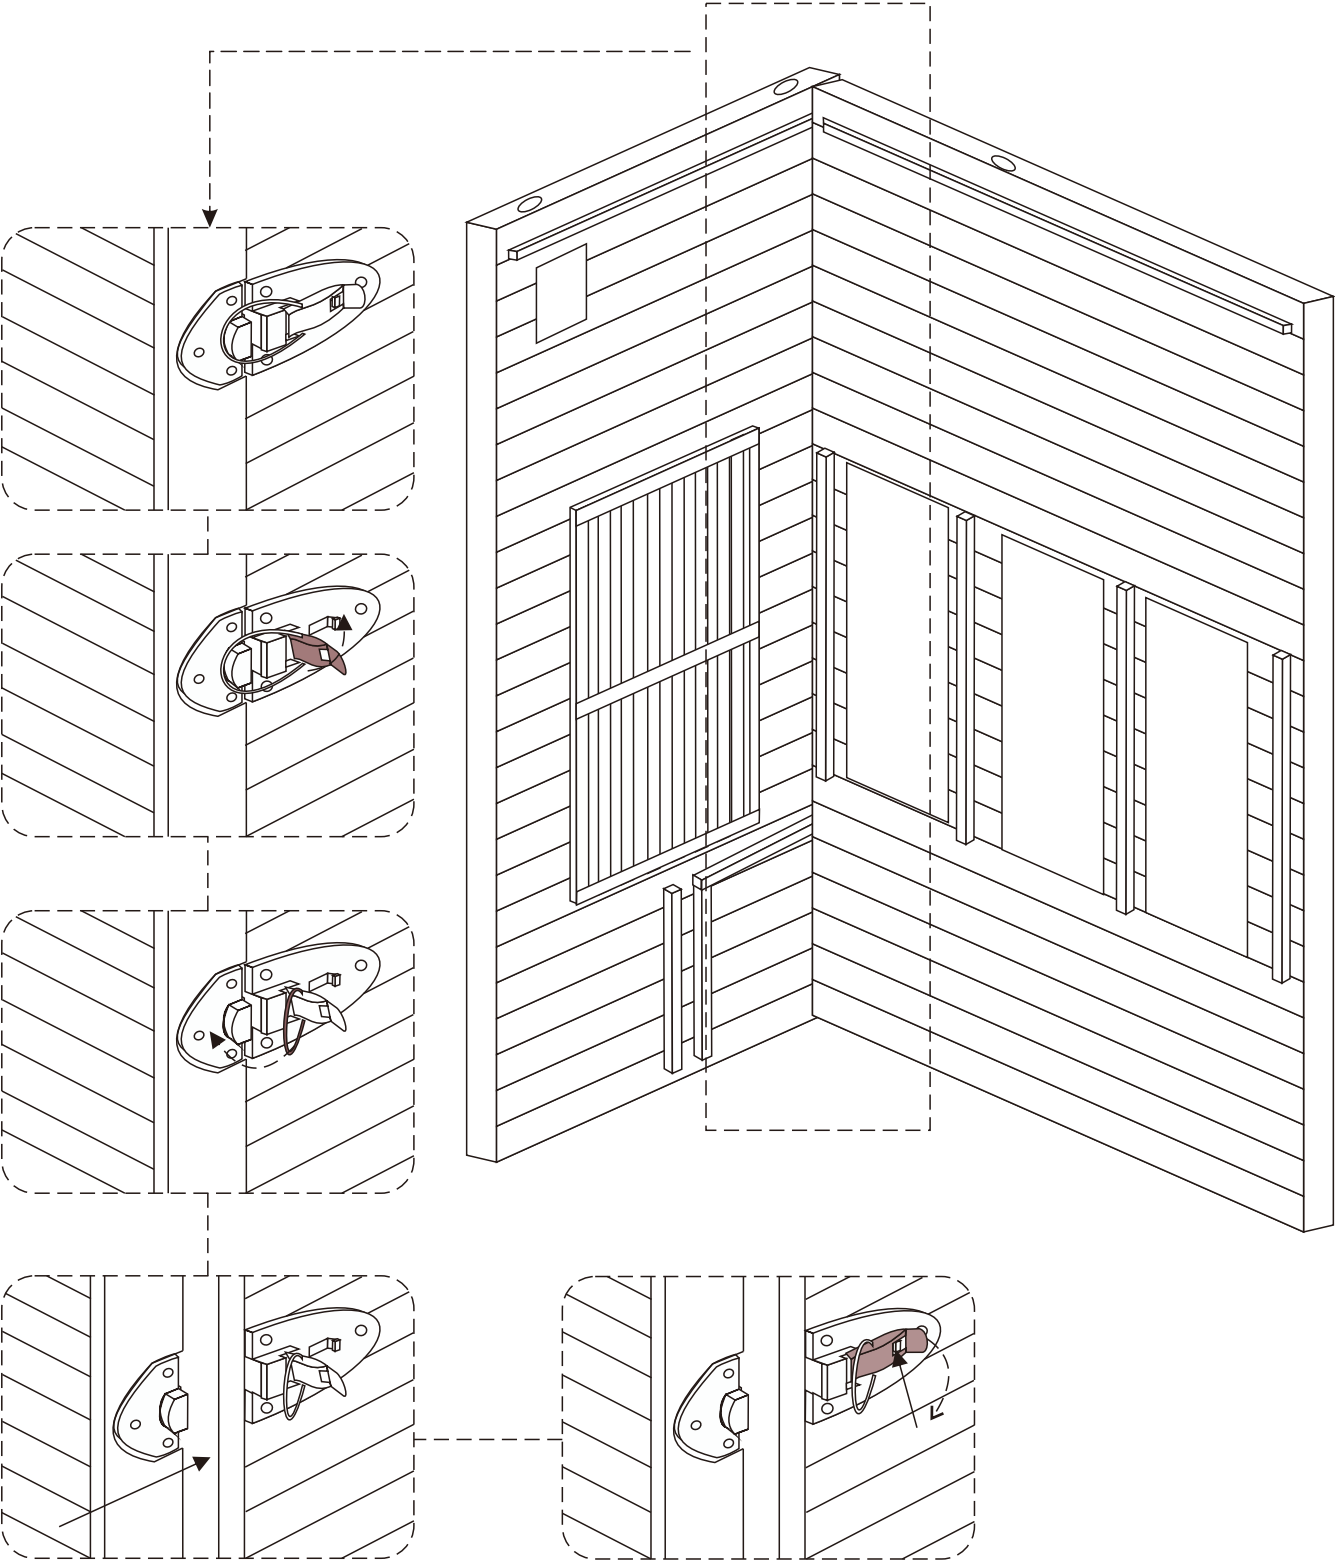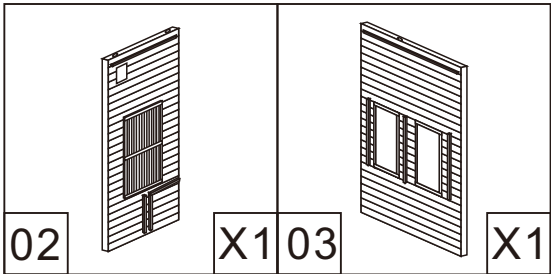





Etape 2

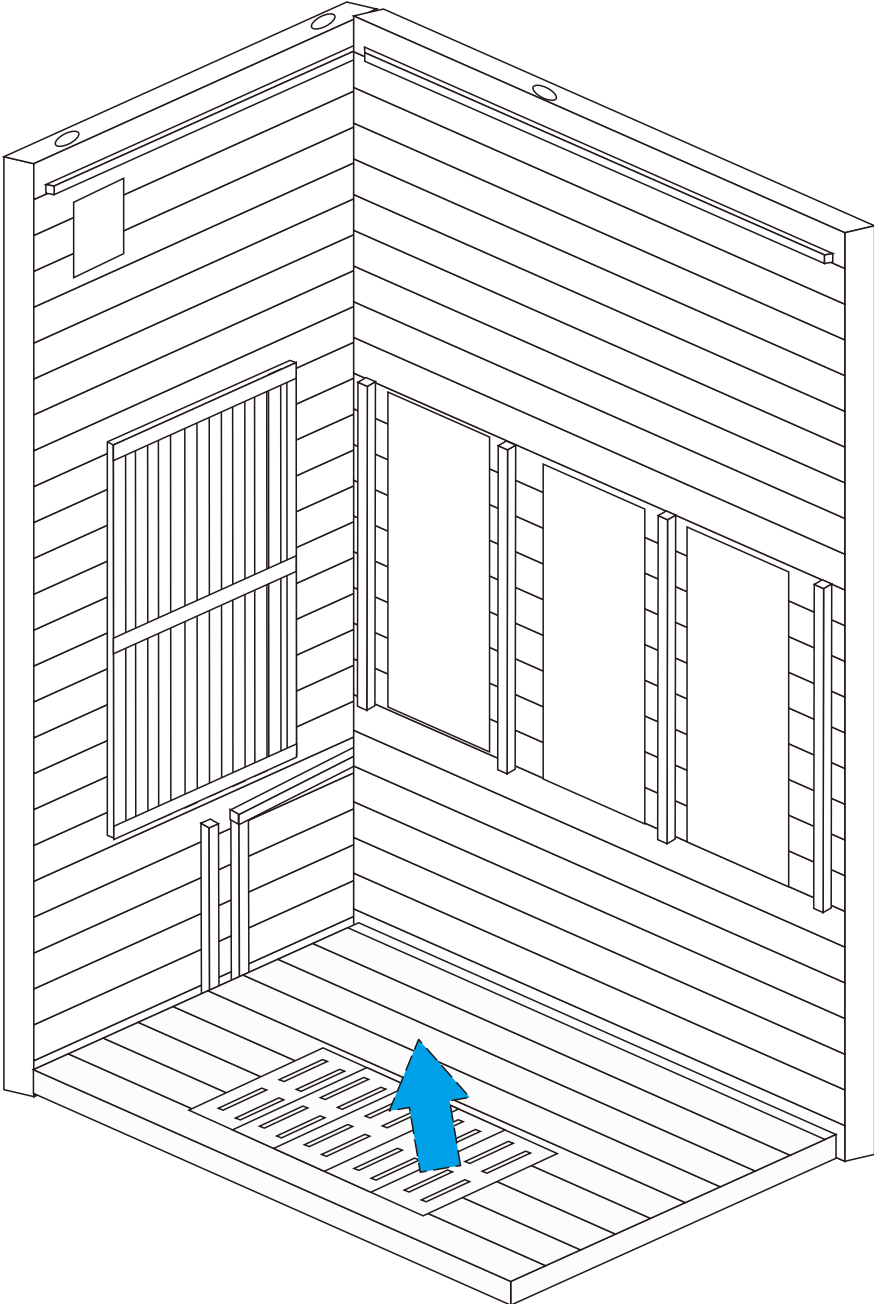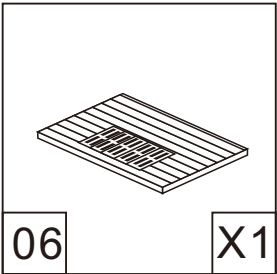 


Etape 3

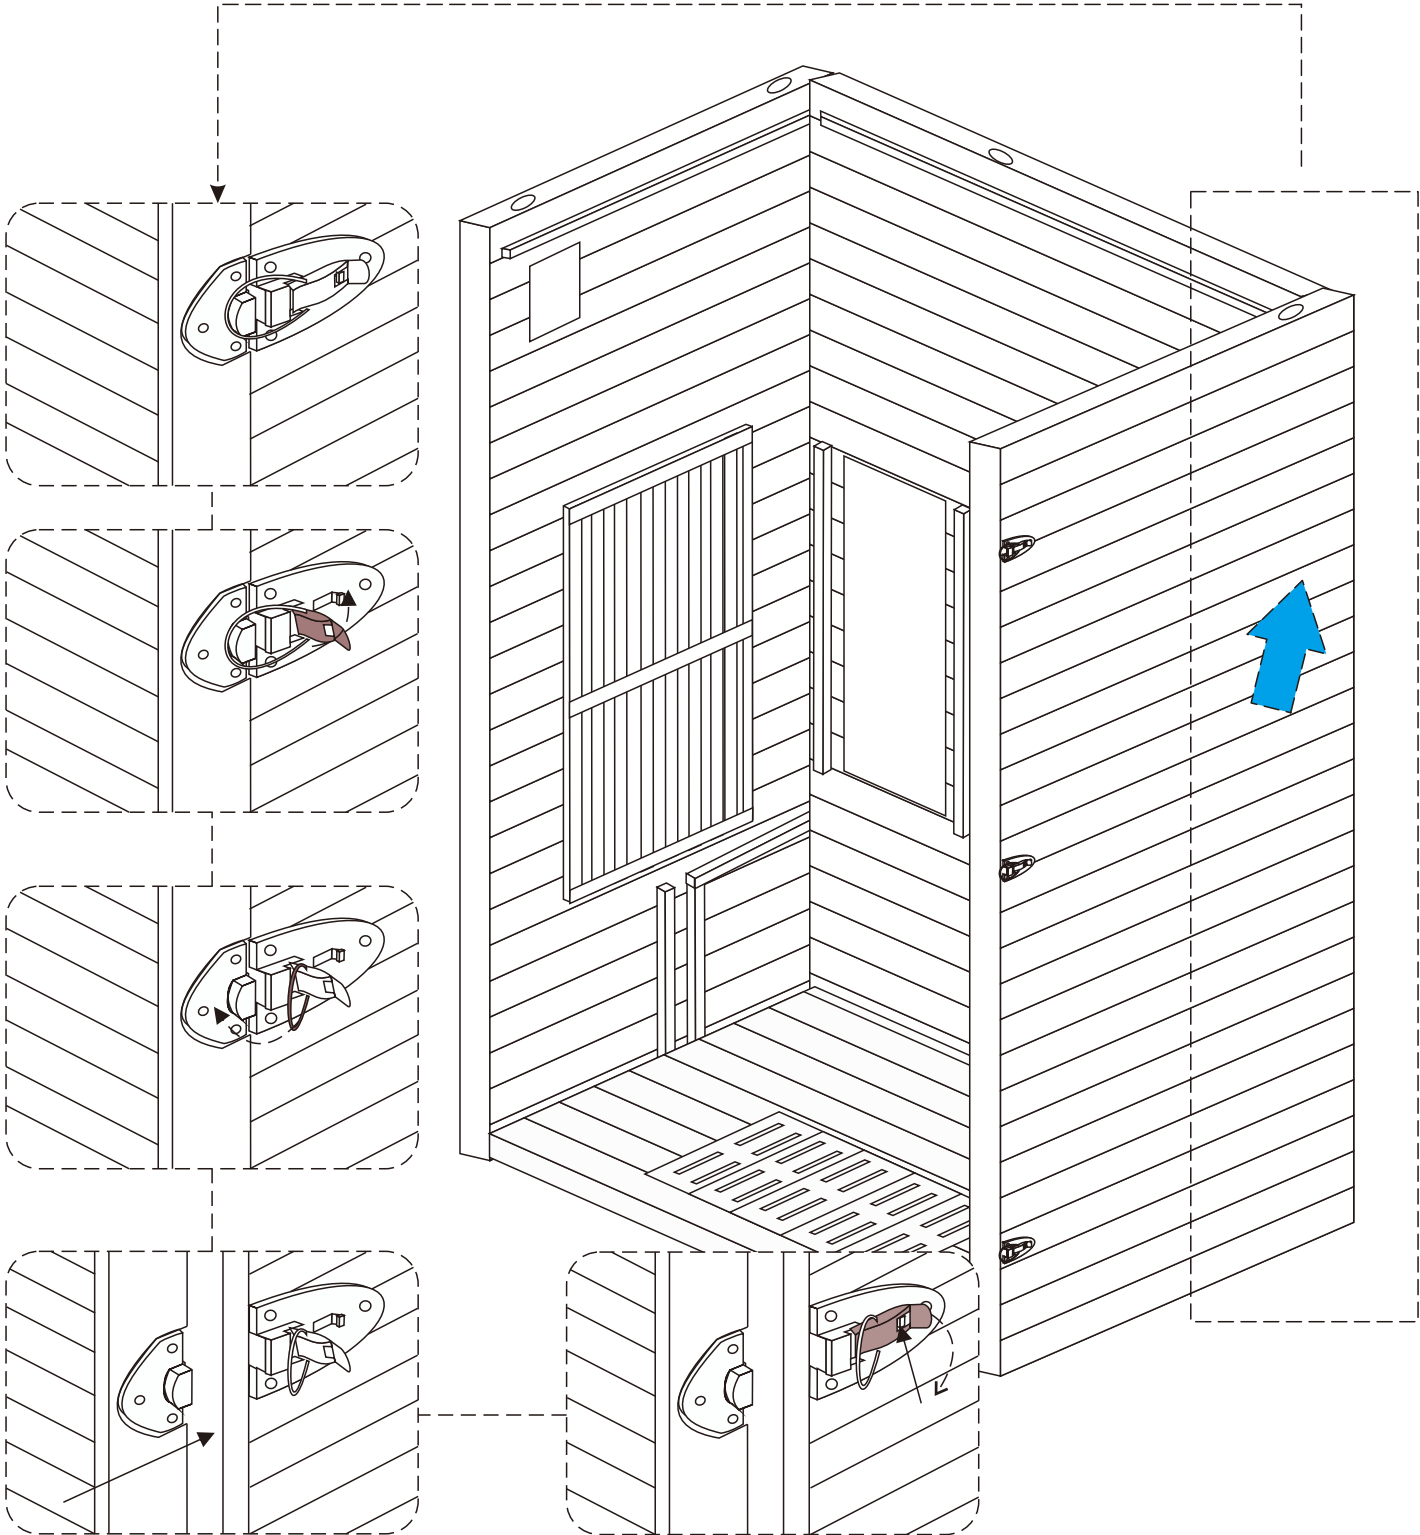 
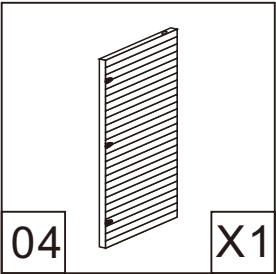 


Etape 4

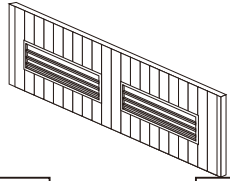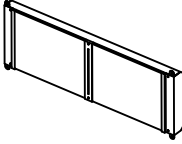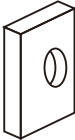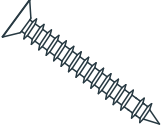 
		 Rubber Pad of heater	 ST 3x18	
09	X1 13	X2 15	X8 17	X8

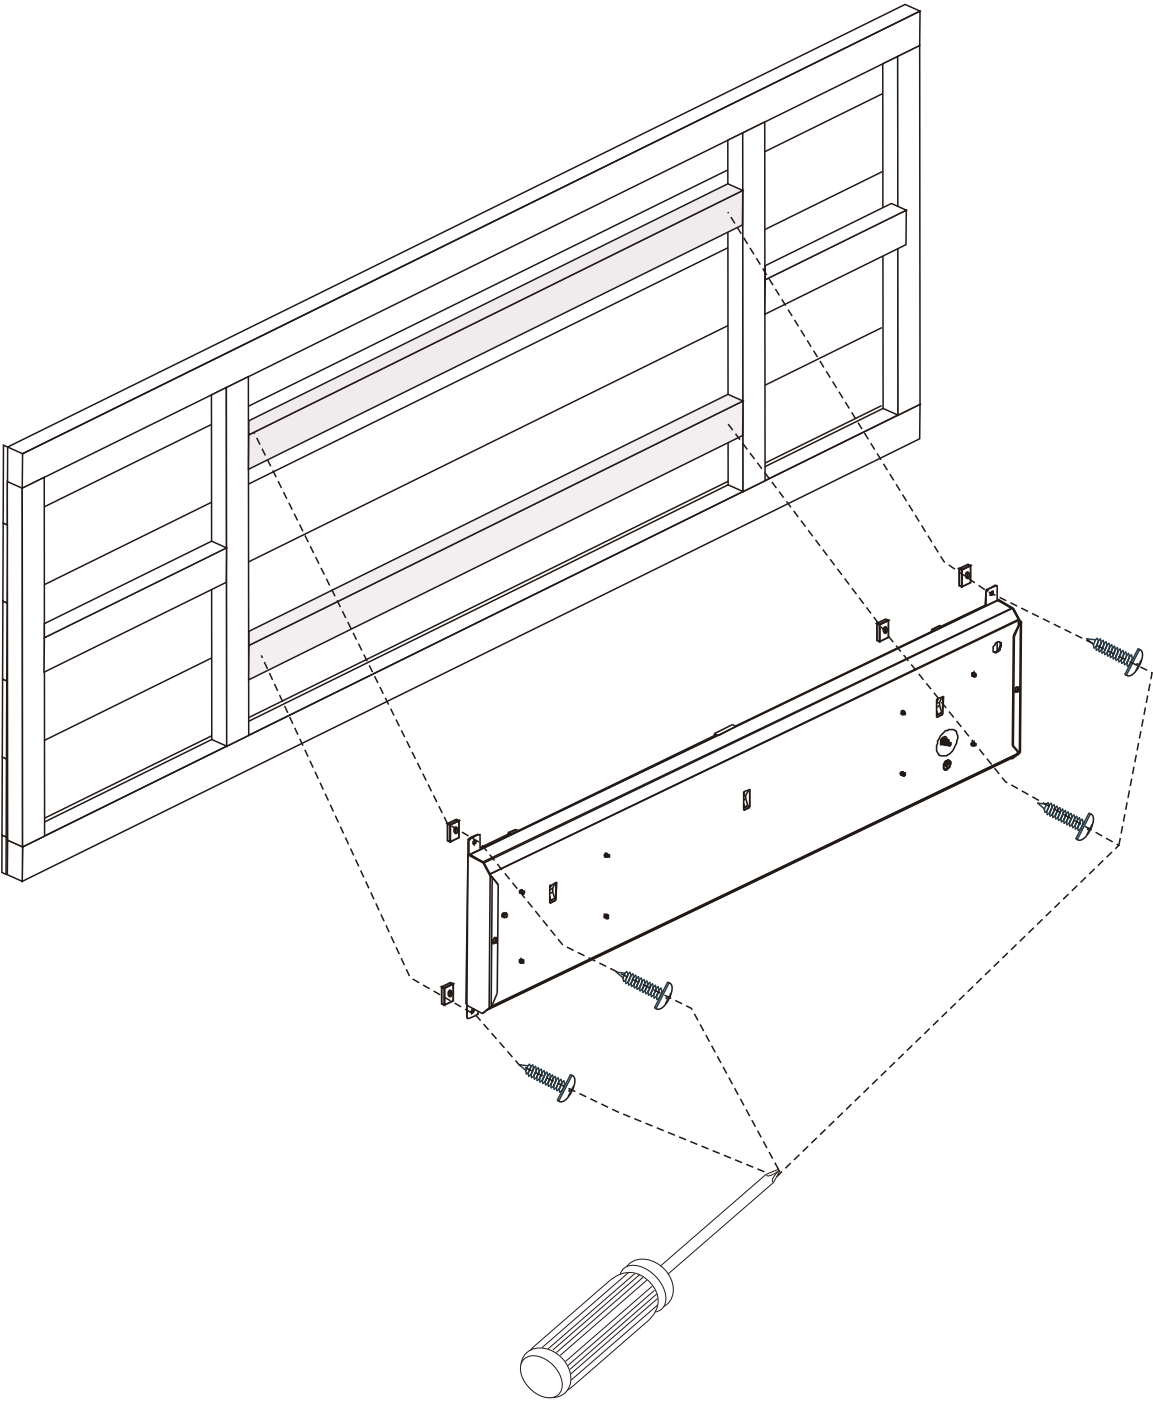

 
 
Etape 5

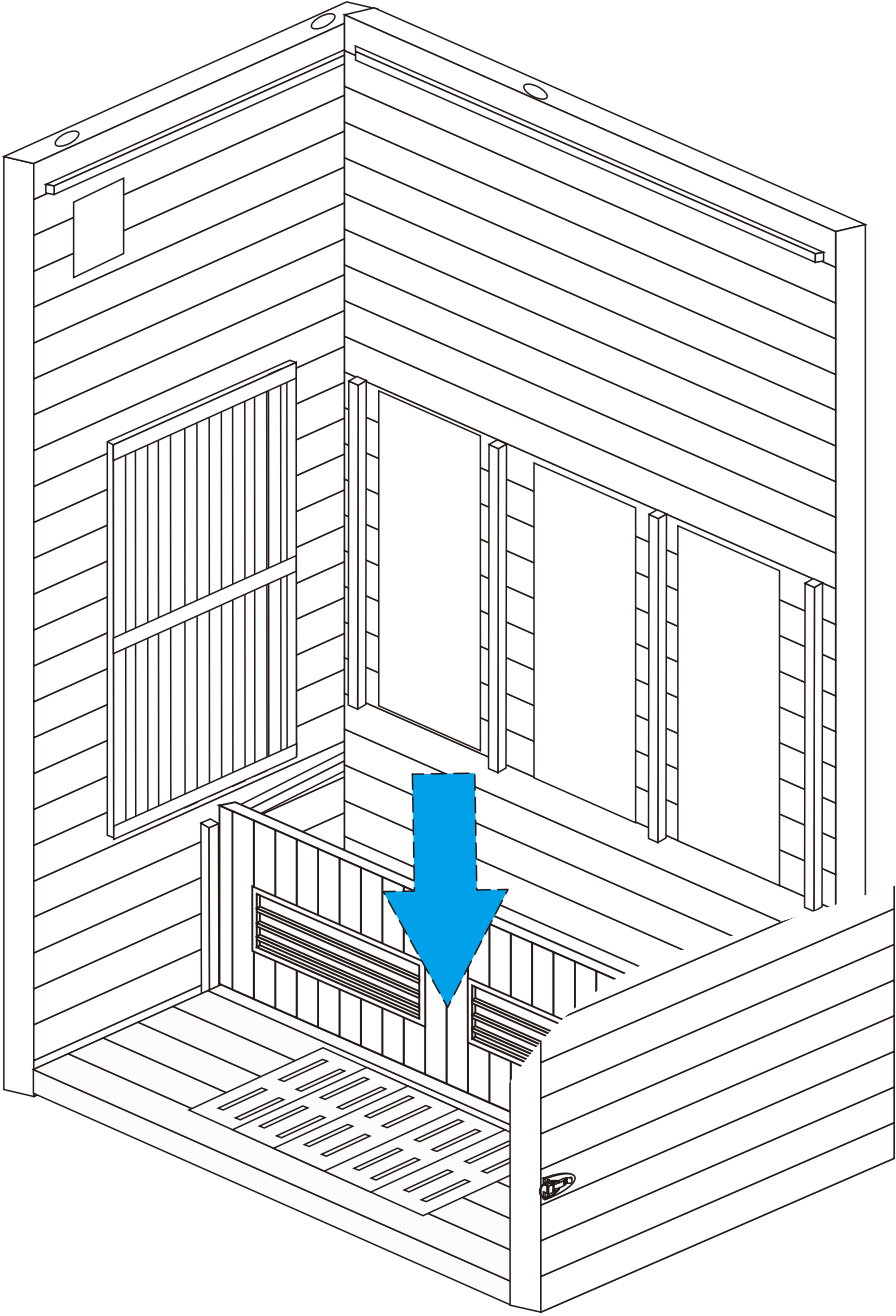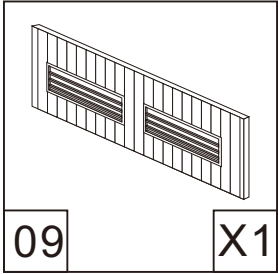



Etape 6

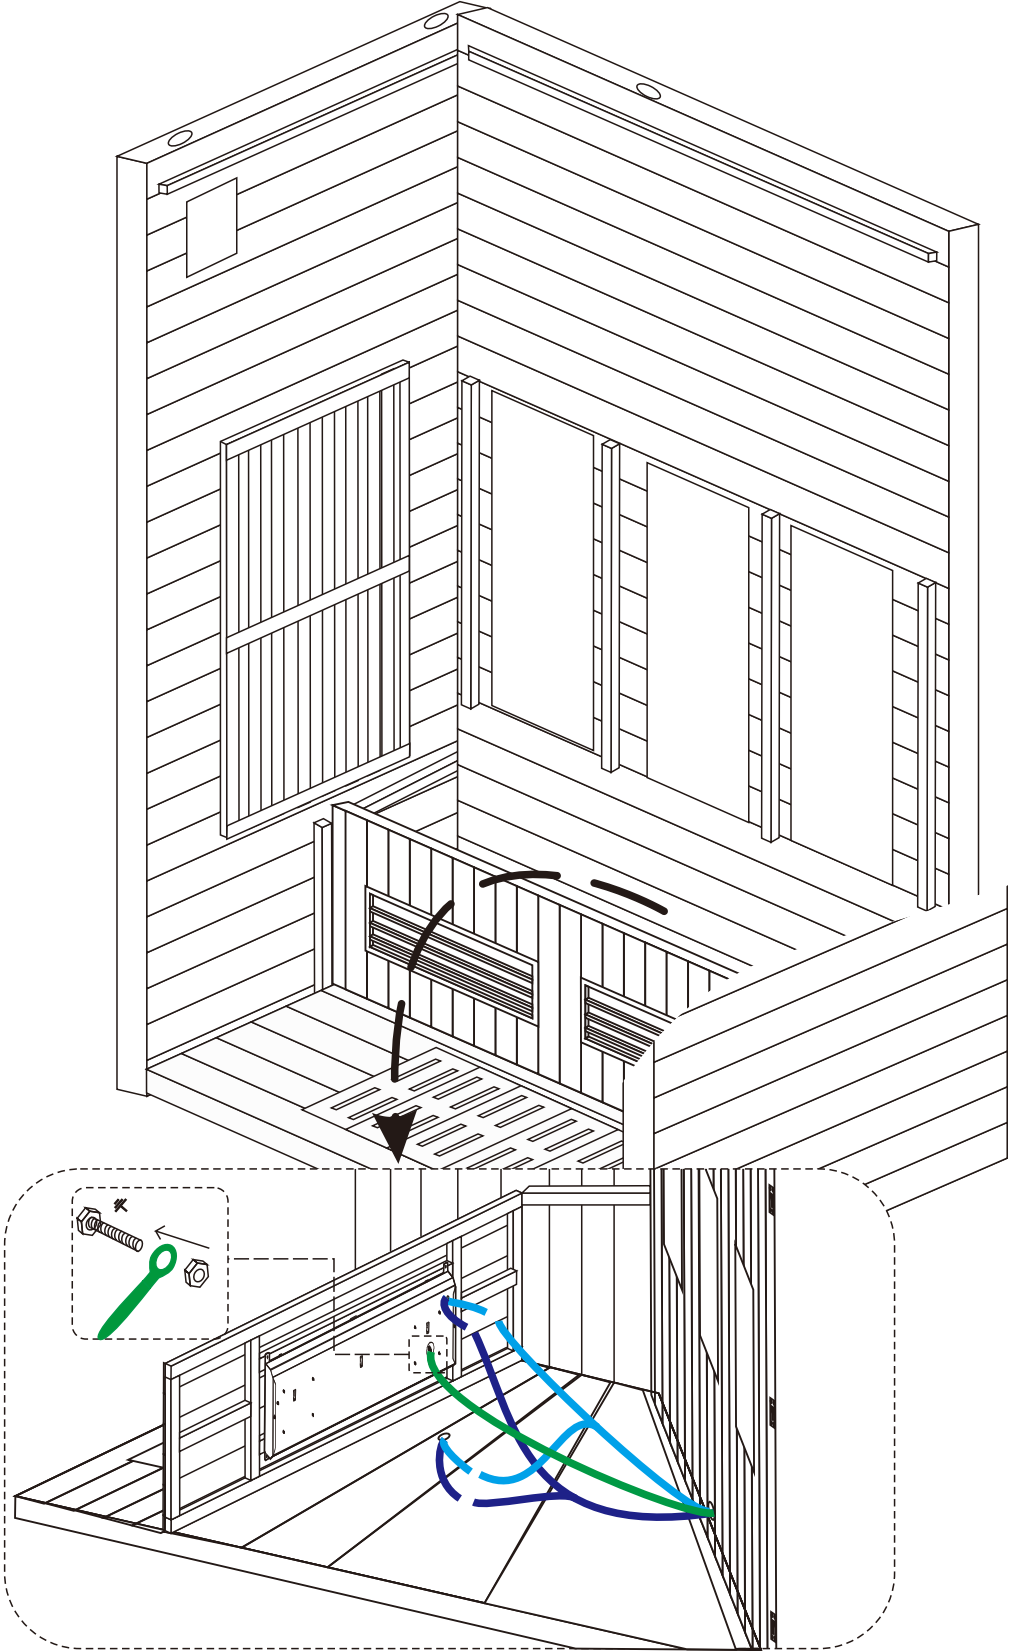 


Etape 7

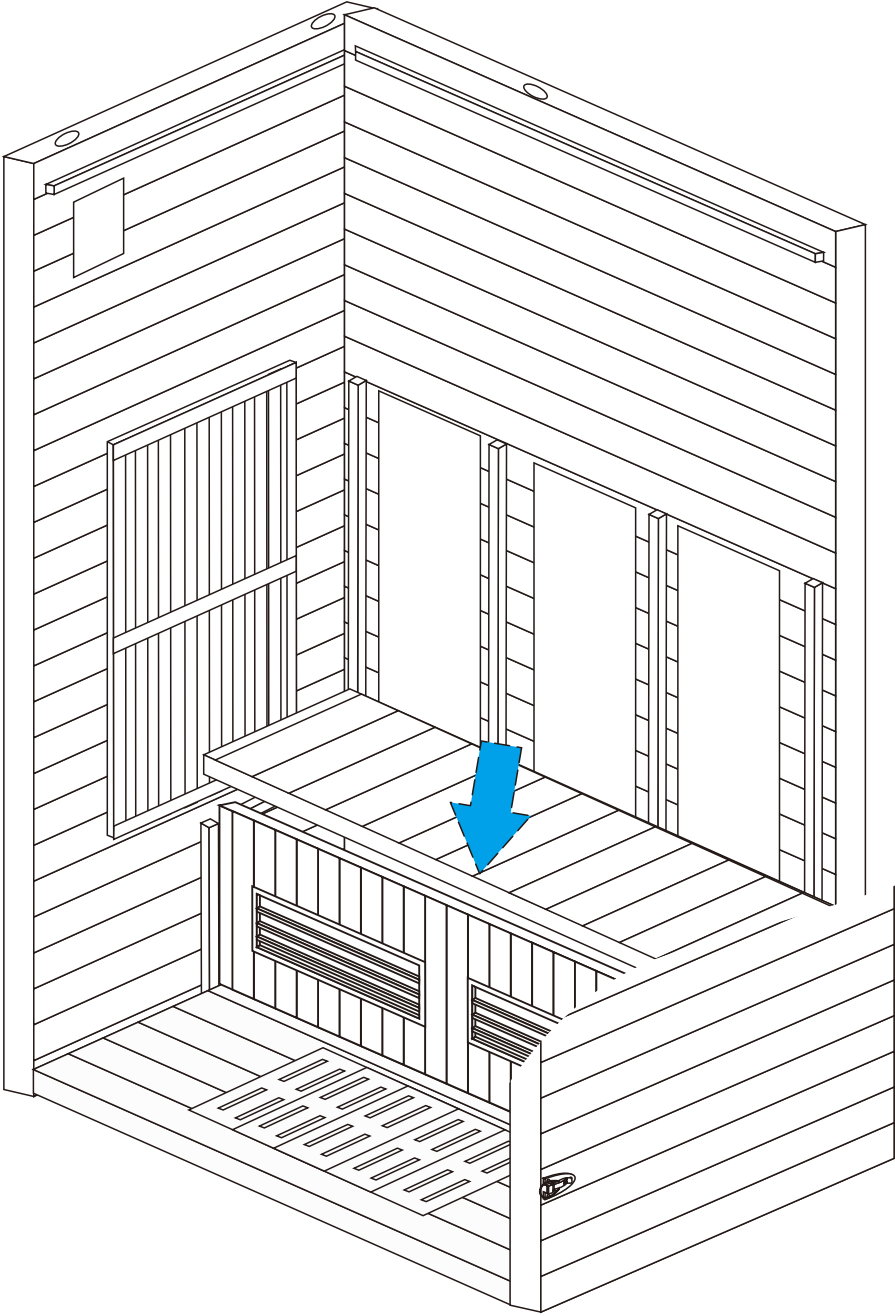 
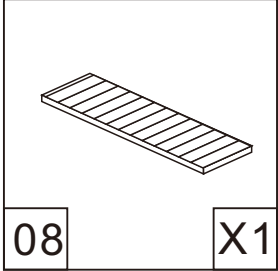 


Etape 8

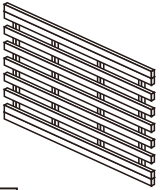
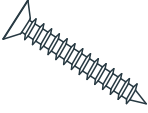
	 ST 5x50	
07	X1 18	X8

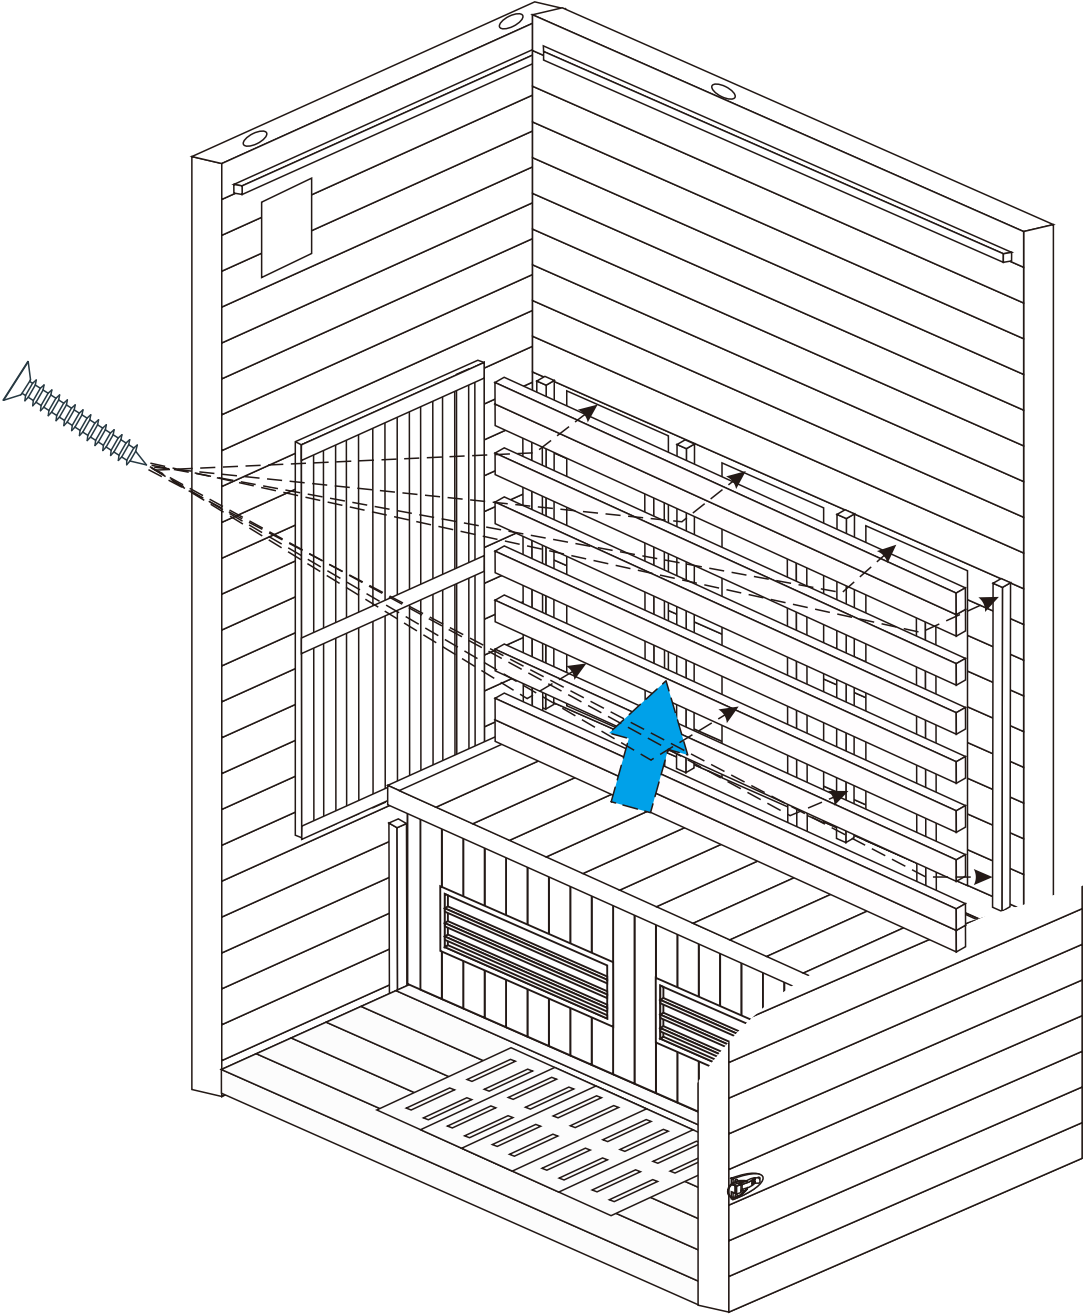 


Etape 9

 
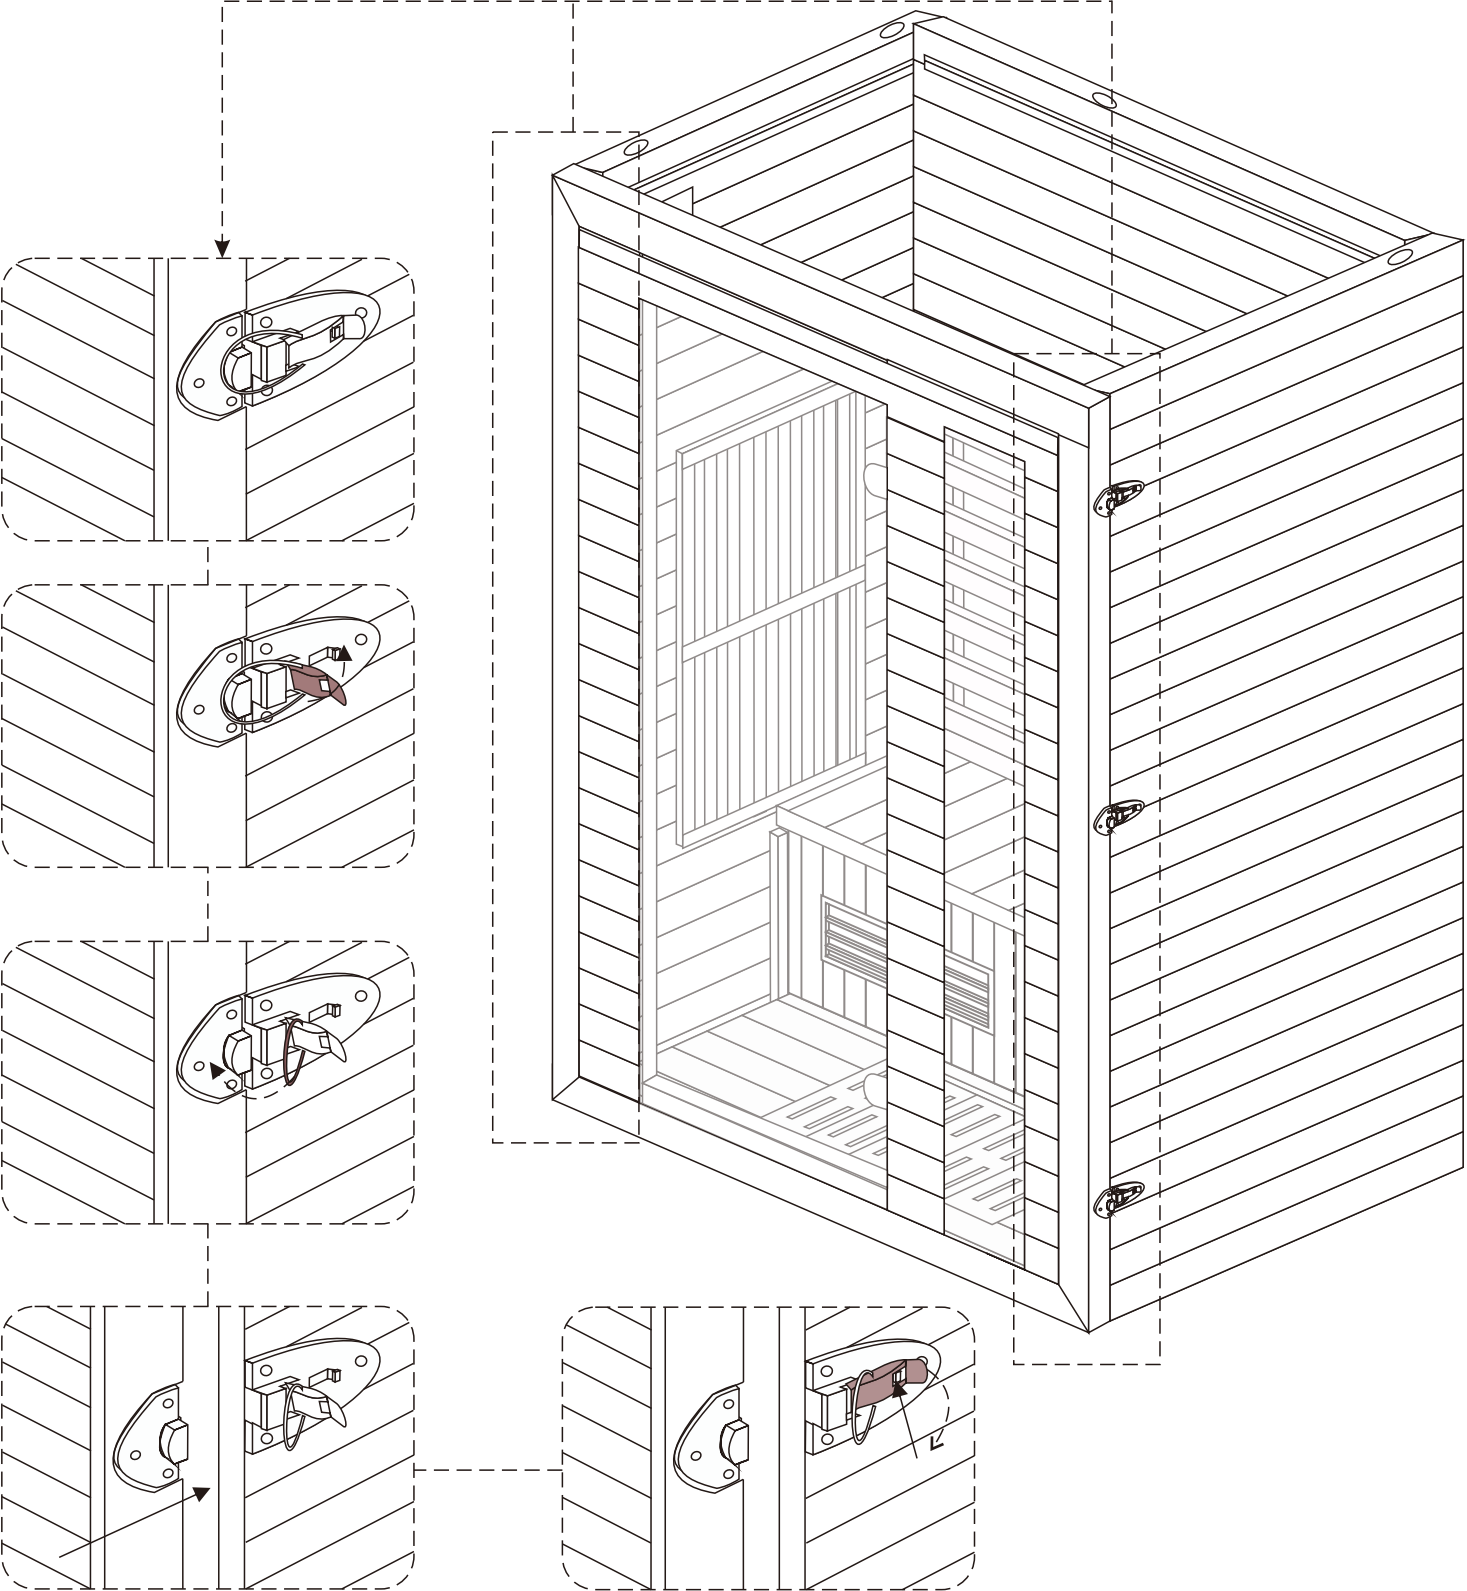
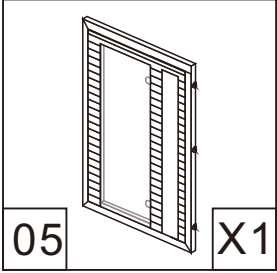


 
 
 
Etape 10

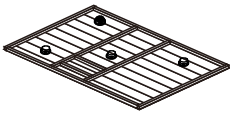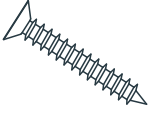	 ST 5x60	
01	X1 18	X8

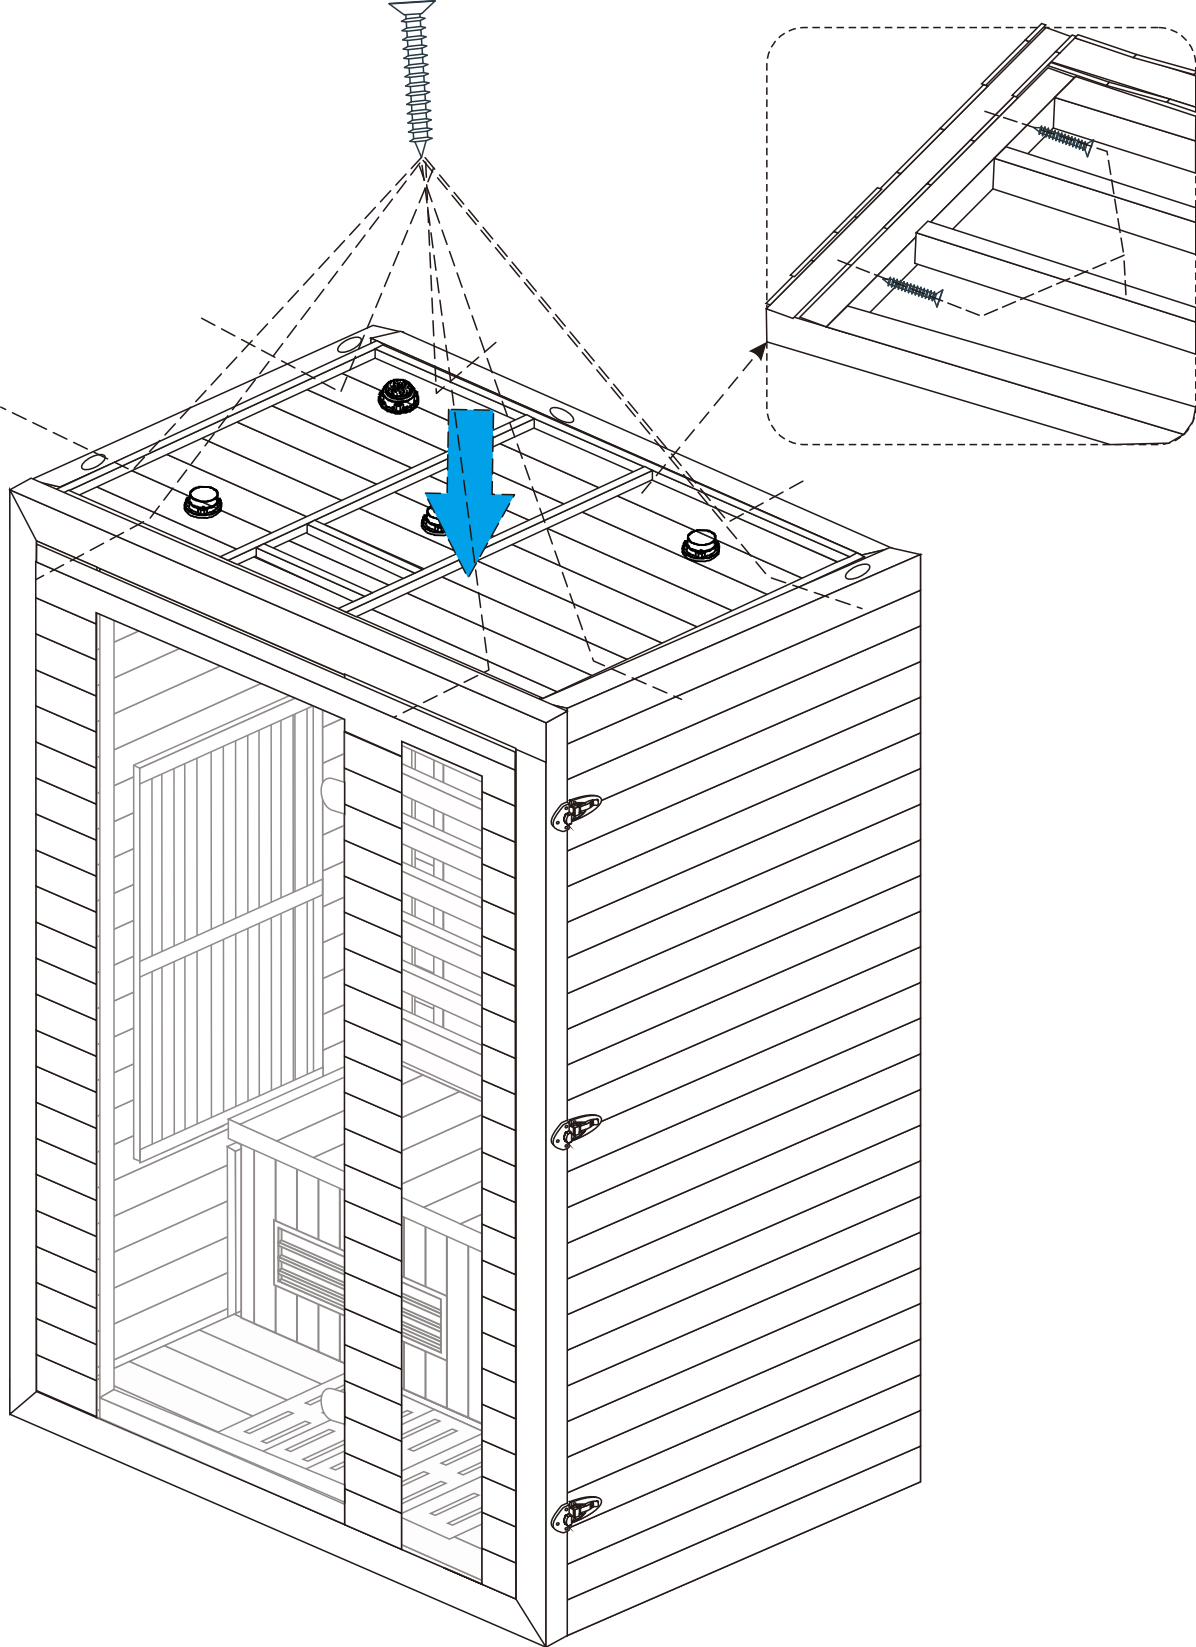

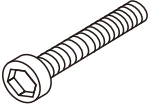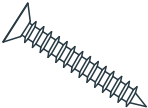


Etape 11

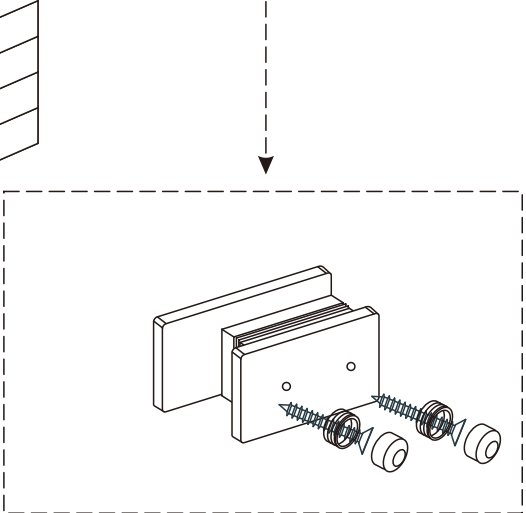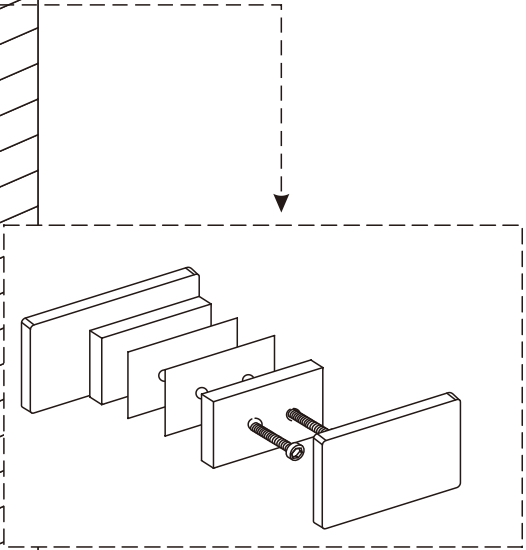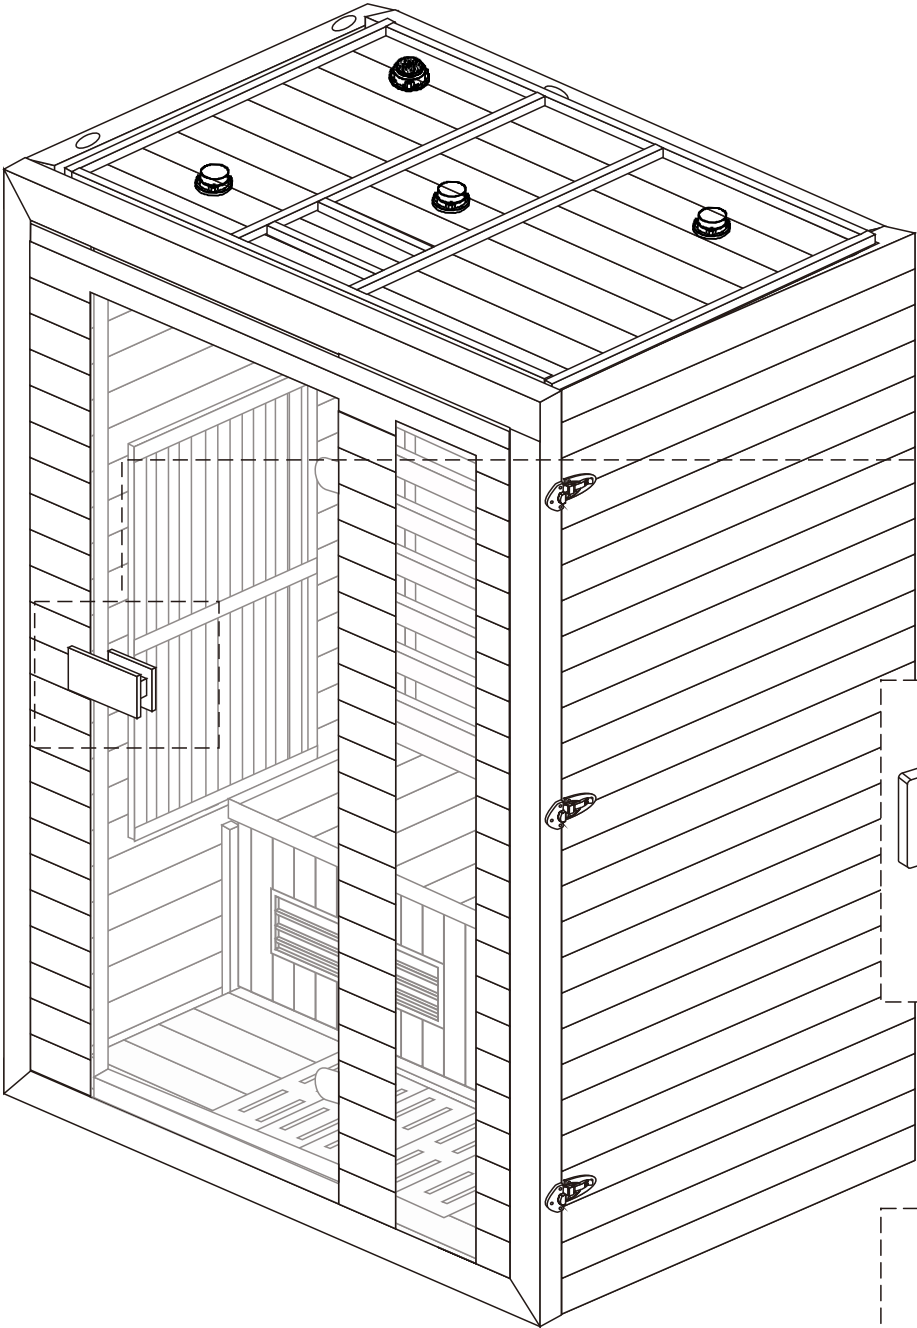		 ST 4X35	
10	X1 16	X2 19	X2



Etape 12

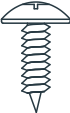 ø8	 ø10	 ST 4x12	
11	X10 12	X5 20	X15

